

DECT REPEATER REGISTRATION

No	Steps of Registration	Result
1	Ensure that you are within range of the DECT Module and that a registered DECT Handset is switched on.	
2	Switch the AGFEO Repeater repeatedly for more than 1 and less than 5 seconds off and on again.	The red LED is flashing slowly, the repeater is in the registration mode (max. 5 minutes)
3	Start the registration process on the DECT Module by pressing the registration button.	The status LED of the DECT Modul is flashing fast. The LED of the AGFEO Repeater 30 is flashing very fast, as soon as a Base Station has been recognised. (This can take up to 30 seconds) Should the DECT Module not be recognised, then repeat from point 2.
4	On the DECT Handset press the off hook button.	The LED on the AGFEO Repeater 30 is now constantly lit. If this is not the case, then please repeat the registration process from point 2
5	Allocate a number to your repeater (2 7) by pressing a digit on your DECT Handset.	The LED will flash corresponding to the selected number, up to 7 times and then will stay lit.
6	Press the Star Button on your DECT Handset	The LED of the Repeater will go off momentarily and then stay lit.
7	Complete this process by replacing the receiver on the DECT Handset. (go on hook)	
	The registration of the AGFEO Repeater is herewith completed	The LED stays constantly lit
Note	Different numbers must be allocated (2....7)if more Repeaters will be registered to one DECT Module. Previous settings of a repeater will be overwritten if registered new.	Should it not be possible to register, then please check the setting of the aerial if set to internal or external. Reduce the distance between repeater and module. Should the call quality on a registered repeater sometimes deteriorate or the LED is starting to flash, then this is an indication that the repeater and base station are too far apart. Please reduce the distance between repeater and base.