

Basic Programming - Euracoms

System Functions

System Reset.....#*9999#
 Factory Default reset.....#*0000# followed by #*9999#
 Date Set.....#*001 DD MM YY #
 Time Set#*002 HH MM #

Telephone Functions

Call Pickup from another phone# 4
 Call Pickup from an answer-phone.....# 500
 Call Pickup from specific answer-phone.....# 5 *tele-number*

Hold a call“R”
 Unhold a call“R” again
 Conference CallDial 1st, “R”, dial 2nd, “R” # 3

DND On#* 831 #
 DND Off#* 830 #

Call Back When Free (Internal only).....hang up, pick up, # 00, hang up
 Call Intrusion (Internal only)hang up, pick up, # 06

Speed Dial Add (100-299).....#* *speed-number tele-number* #
 Speed Dial – Dialing.....# *speed-number*
 Speed Dial – Delete#* *speed-number* #

Call Forward – All Calls – Destination Set.....#* 61 *tele-number* #
 Call Forward – All Calls – Destination Clear.....#* 61 #
 Call Forward – All Calls – Enable.....#* 6011 #
 Call Forward – All Calls – Disable#* 6010 #

Call Forward – When Busy – Destination Set.....#* 62 *tele-number* #
 Call Forward – When Busy – Destination Clear.....#* 62 #
 Call Forward – When Busy – Enable.....#* 6021 #
 Call Forward – When Busy – Disable#* 6020 #

Call Forward – On No Answer – Destination Set.....#* 63 *time-seconds tele-number* #
 Call Forward – On No Answer – Destination Clear.....#* 63 #
 Call Forward – On No Answer – Enable.....#* 6031 #
 Call Forward – On No Answer – Disable#* 6030 #

Call Follow-Me – Enable#* 65 *tele-number-to-follow* #
 Call Follow-Me – Disable.....#* 66 *tele-number-to-follow* #

Wake-up Call – Set#* 59 HH MM #