
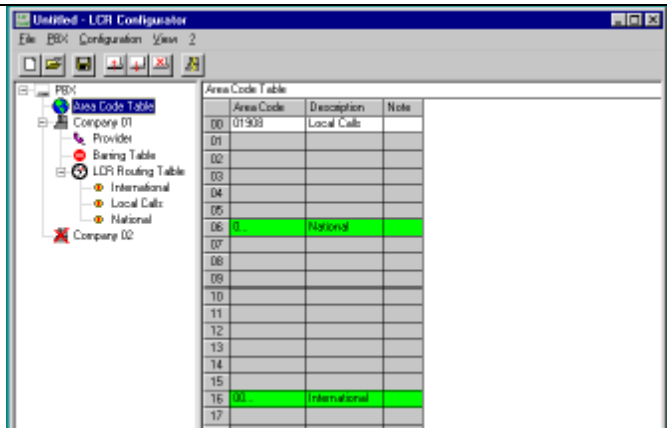
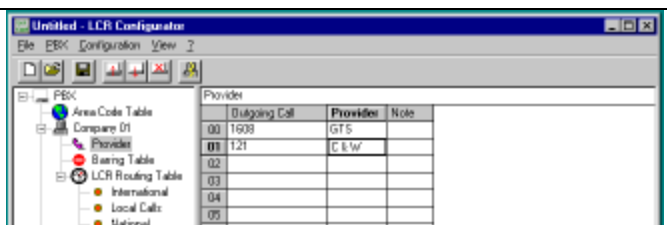
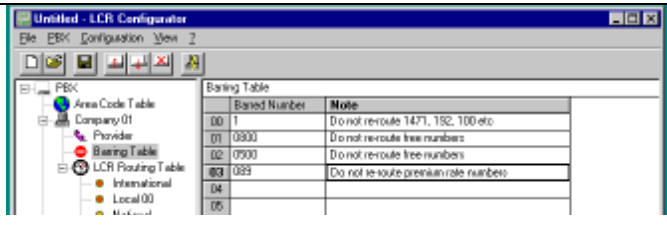
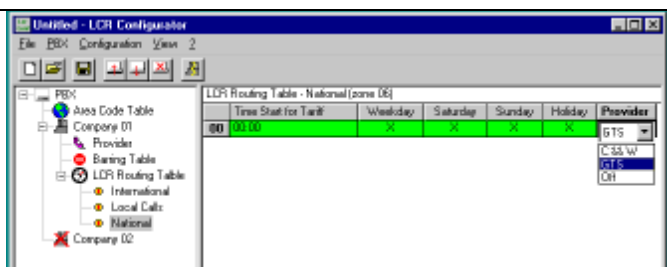



## Least Cost Routing – Configuration Software

	<p><b>The Opening Screen</b></p> <ul style="list-style-type: none"> <li>When the software first loads, you will see the menu shown on the left.</li> <li>You will need to add information on each of the screens to configure the EURACOM LCR program correctly.</li> </ul>
	<p><b>Area Code Table</b></p> <ul style="list-style-type: none"> <li>The EURACOM will support 3 carriers, one for each of the following: Local, National &amp; International.</li> <li>The local area code needs to be entered manually.</li> <li>Sections for national and international cannot be changed. They are automatically prefixed to "0" for national (eg 01525 712121), &amp; "00" for international (eg 00 44 1234 567890).</li> </ul>
	<p><b>Carrier Prefixes</b></p> <ul style="list-style-type: none"> <li>Enter the carrier code prefixes that you will be using to route your telephone calls.</li> <li>Enter as many carriers as you want.</li> </ul>
	<p><b>Exception Codes</b></p> <ul style="list-style-type: none"> <li>Enter the codes that you do NOT wish to be routed via any of the providers.</li> <li>Examples – 080 050 (freephone numbers), 1 (operator calls), 999 (emergency calls)</li> </ul>
	<p><b>And Finally...</b></p> <ul style="list-style-type: none"> <li>Select the provider to be used for local, national &amp; international.</li> <li>Press  to send the configuration to the EURACOM (Please note that a system reset is not required)</li> </ul>