


## Networking Euracoms

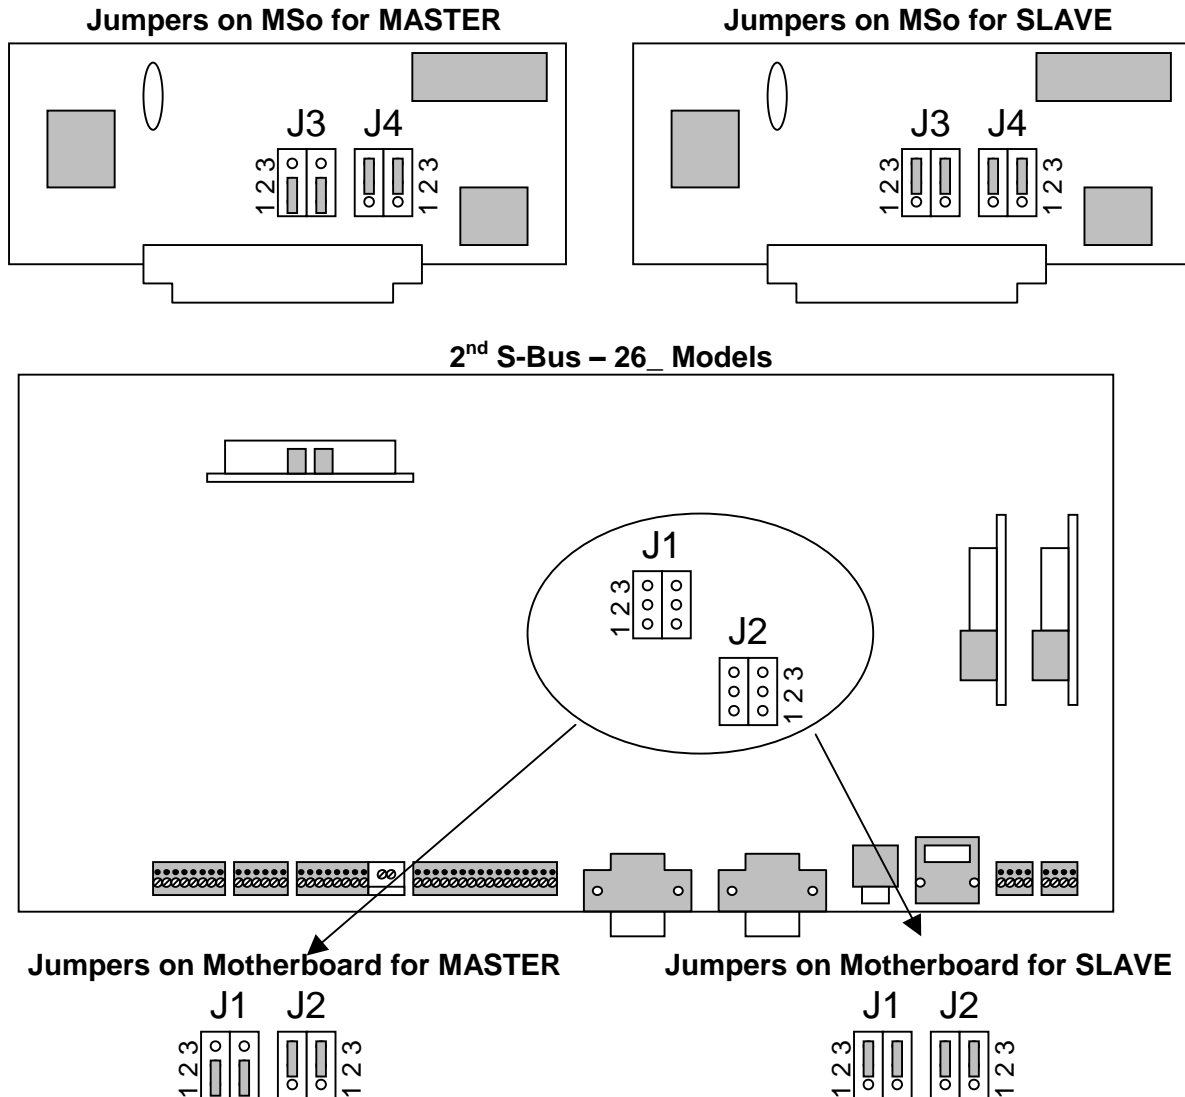

### Programming:

(M= do on master, s= do on slave)

- 1) M - #\*0044# (define as networked)  
S - #\*0044# (define as networked)
- 2) M - #\*0030# (define as MASTER)  
S - #\*0031# (define as SLAVE)
- 3) M - #\*005x2# (define protocol for network, x = So bus connection)  
S - #\*005x2# (define protocol for network, x = So bus connection)
- 4) M - #\*006x4# (define network port, x = So bus connection)  
S - #\*006x3# (define network port, x = So bus connection)
- 5) M - #\*9999# (SYSTEM RESET)

You can now program the system via the PC and the MASTER Euracom

